
## **Basler DGC-2020 (Hardwired)**

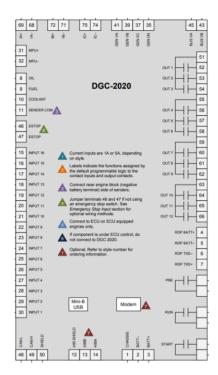

**Control Board** 

Generac Gateway Side Termination	Description	Wire Color	Customer Side Terminations
TB1 V+	DC+	Red	Terminal 3*  Jump DC+ to Terminal 51
			and Terminal 55
TB1 V-	DC-	Black	Terminal 2*
TB2 DICOM	Input Common	Orange	Terminal 2
TB2 DI0	Engine Running	Purple	RUN Terminal
TB2 DI1	Not In Auto	Green	Terminal 53**
TB2 DI2	Common Alarm	White	Terminal 56**
			Jump Terminal 56 to Terminal 54**
Harness Relay #1	COM	Blue	2-Wire Start Input
	N/O	White / Blue	2-Wire Start Input



- \*If MODEM and signal lights turn off and data is lost after gen crank, this can indicate a brief loss of power. To correct, ensure red and black wires are connected directly to the battery posts.
- \*\*Assumes factory default configuration for outputs 1,3, and 4 for Not in Auto, Global Alarm, and Global Pre-Alarm respectively.

