

Generac Power Zone 410



Generac Gateway Side Termination	Description	Wire Color	Customer Side Terminations
TB1 V+	DC+	Red	B+*
TB1 V-	DC-	Black	B-*
TB1 A	Data +	Orange / White	TB2-RS485+
TB1 B	Data -	White / Orange	TB2-RS485-
TB1 GND	Data GND	White / Blue	TB2-SHLD
Harness Relay #1	COM	Blue	2-Wire Start
	N/O	White / Blue	

Expected comm settings:

Unit ID: 157
 Baud rate: 9600
 Data Bits: 8
 Parity: None
 Stop Bits: 1

If different settings are required, please contact support.

RS485 slave port configuration can be reached through Dealer Menu access by pressing:
 Esc>Esc>Up>Up>Down>Down
 Edit Settings>Config RS485 Slave

*If MODEM and signal lights turn off and data is lost after the generator crank, this can indicate a brief loss of power. To correct, ensure red and black wires are connected directly to the battery posts.

