


# Generac C Panel



Top view of C Panel control board

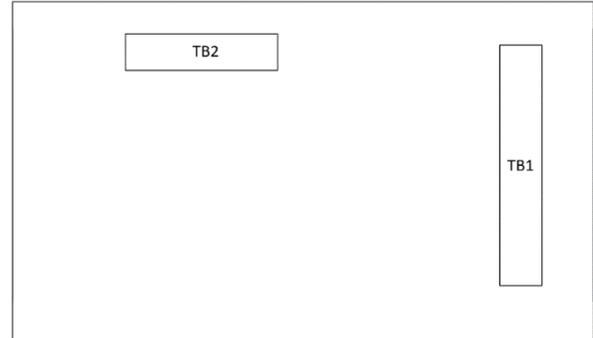

Generac Gateway Side Termination	Description	Wire Color	Customer Side Terminations
TB1 V+	DC+	Red	TB1-218*
TB1 V-	DC-	Black	TB1-0*
TB2 DICOM	Input Common	Orange	TB1-0
TB2 DI0	Engine Running	Purple	TB1-219
TB2 DI1	Not in Auto	Green	TB2-228
TB2 DI2	Common Alarm	White	TB2-211 Jump B+ to TB2-210
Harness Relay #1	2 Wire Start	Blue	TB1-178
		White / Blue	TB1-183

\*If MODEM and signal lights turn off and data is lost after gen crank, this can indicate a brief loss of power. To correct, ensure red and black wires are connected directly to the battery posts.

