
Olympian 4001 Installation Guide





| Generac Gateway Side Termination | Description | Wire Color | Customer Side Terminations |
|----------------------------------|----------------|--------------|--------------------------------|
| TB1 V+ | DC+ | Red | *B+ |
| TB1 V- | DC- | Black | *B- |
| TB1 DICOM | Input Common | Orange | B- |
| TB2 DI0 | Engine Running | Purple | Hour Meter+ |
| TB2 DI1 | Not in Auto | Green | Board Terminal 17 (Wire 13) |
| TB2 DI2 | Common Alarm | B+ | TB 10 (COM) |
| | | White | TB 11 (N/O) |
| Harness Relay #1 | 2 Wire Start | Blue | TB1 |
| | | White / Blue | TB2 |

*If gateway power lights blink on gen crank, this can indicate a brief loss of power. To correct, ensure red and black wires connect directly to the battery posts.

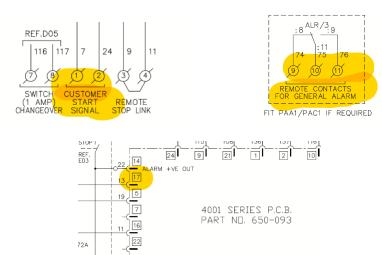